 
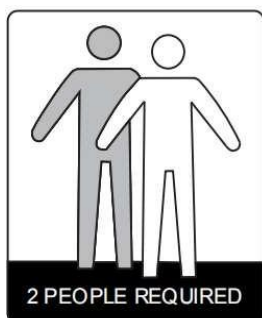 


Assembly Instructions

Felton Dining Chair

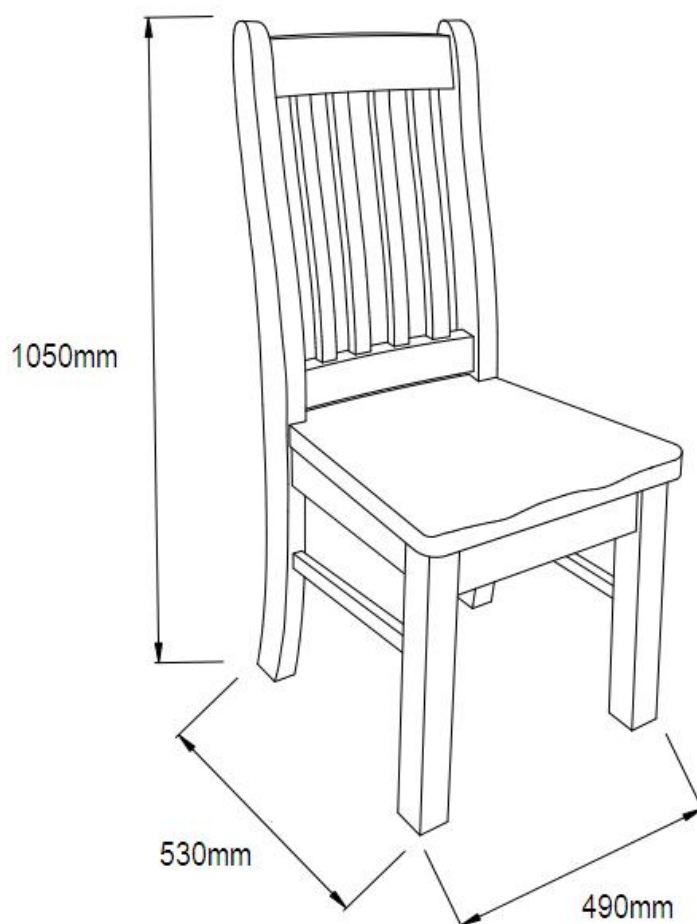 


WARNING


FAILURE TO FOLLOW THESE BASIC STEPS CAN LEAD TO DAMAGE THAT IS NOT COVERED BY YOUR WARRANTY

1. Read instructions carefully. Check no parts are missing.
2. Lay out all of the components on a soft surface as if you were preparing to do a jigsaw puzzle.
3. Carefully identify each component, especially those that are similar. The most common mistake is getting things back to front.
4. Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.
5. **DO NOT** fully tighten screws (leave slightly loose). When the item is fully assembled tighten the screws - but do not over tighten.
6. **DO NOT** set glue until you are certain that the parts belong together.
7. Always lift the product to move. Do not drag the product.

What you need

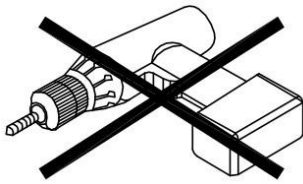


DO NOT USE ON PRODUCT

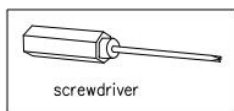 







Not Included

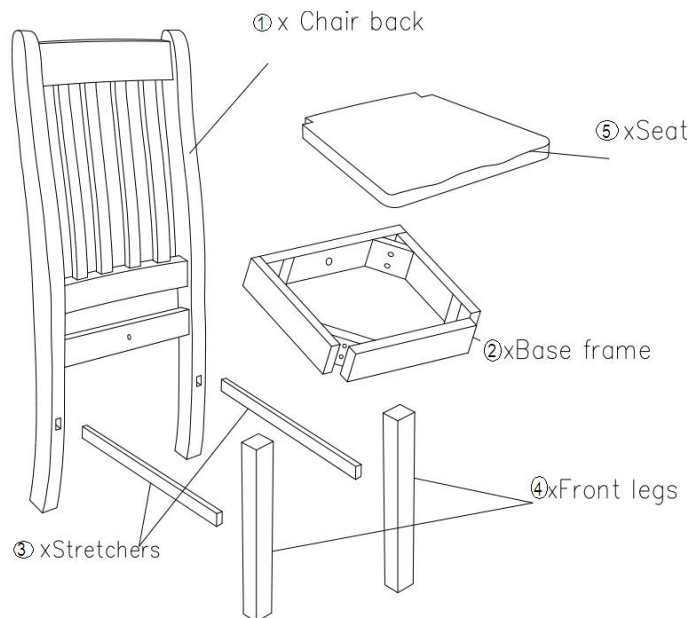 NO. PARTS LIST QTY

①	CHAIR BACK	1
②	BASE FRAME	1
③	STRETCHERS	2
④	FRONT LEGS	2
⑤	SEAT	1

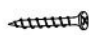 






a. Allen Bolt M8mmx50mm 1 PCS 	b. Allen Bolt M8mmx100mm 8 PCS 	c. Timber Screw M4mmx45mm 4 PCS 
d. Spring Washer M8mm 9 PCS 	e. Steel Washers M8mm 9 PCS 	f. Allen Key 1 PCS 

Please make sure you have all these parts before you start.

Step 1

 You will need:



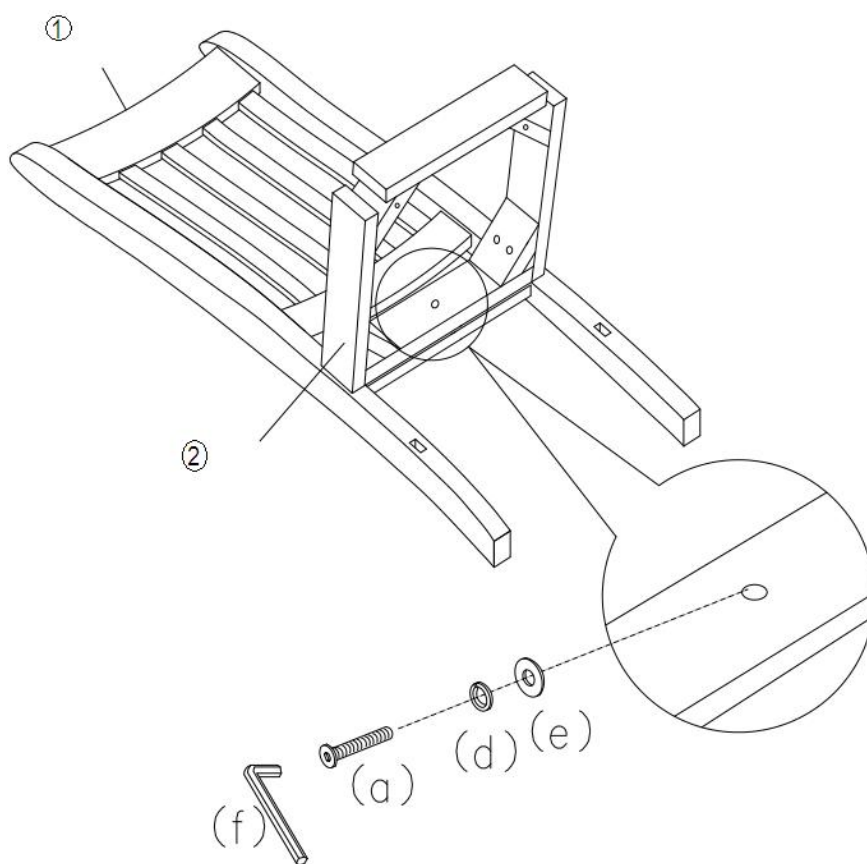

a, 1×Allen Bolt M8mm×50mm	
d, 1×Spring Washer M8mm	
e, 1×Steel Washer M8mm	
f, 1×Allen Key	




Fasten the base frame ② to the chair back ① with Allen bolt (a), spring washer (d) and steel washer (e).

Step 2

You will need:


b, 4×Allen Bolt M8mm×100mm	
d, 4×Spring Washer M8mm	
e, 4×Steel Washer M8mm	
f, 1×Allen Key	

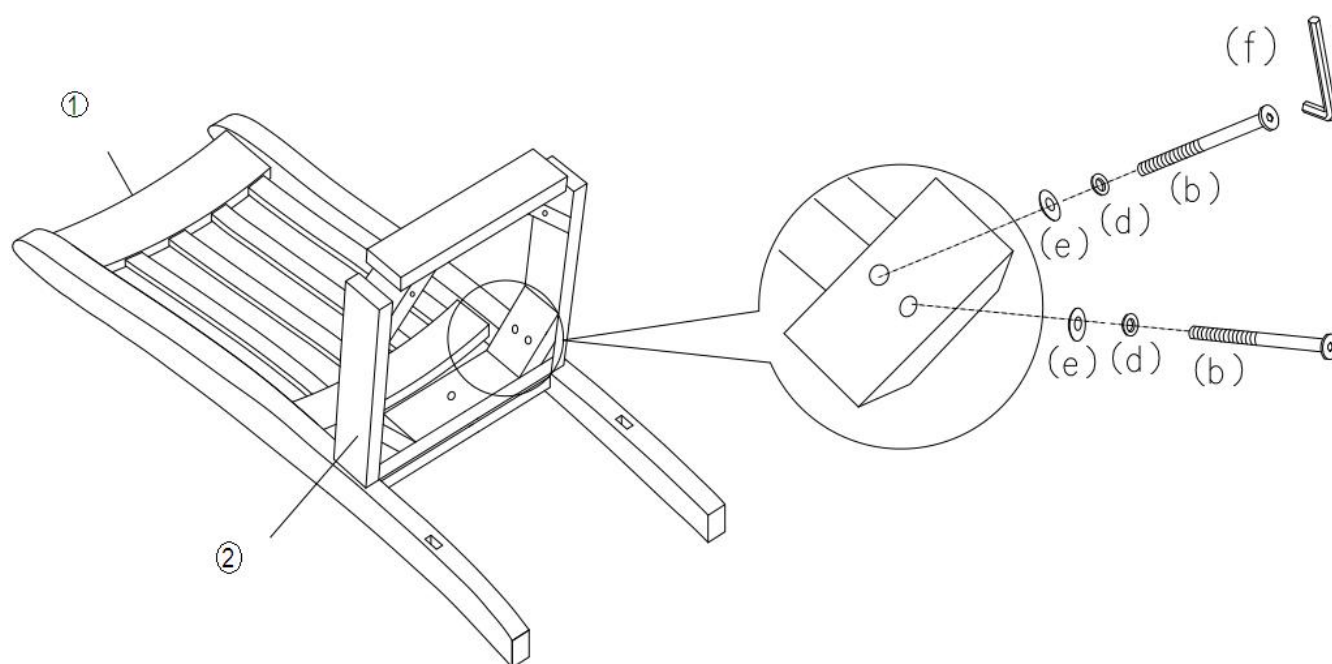 

Note: Do not fully tighten the screw at this moment.

 Fix the base frame ② to the chair back ① through the corner blocks of base frame ② with Allen bolts (b), spring washers (d) and steel washers (e).



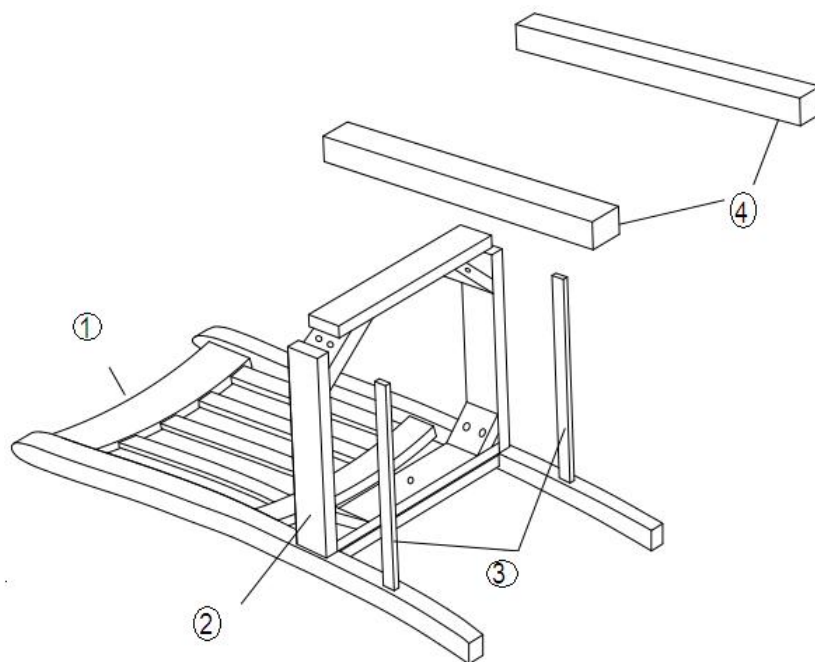

Step 3




Insert the stretchers ③ into the leg of chair back ①. Position the front legs ④ onto stretchers ③ and base frame ②.

Step 4

You will need:

b, 4× Allen Bolt M8mm×100mm	
d, 4× Spring Washer M8mm	
e, 4× Steel Washer M8mm	
f, 1× Allen Key	


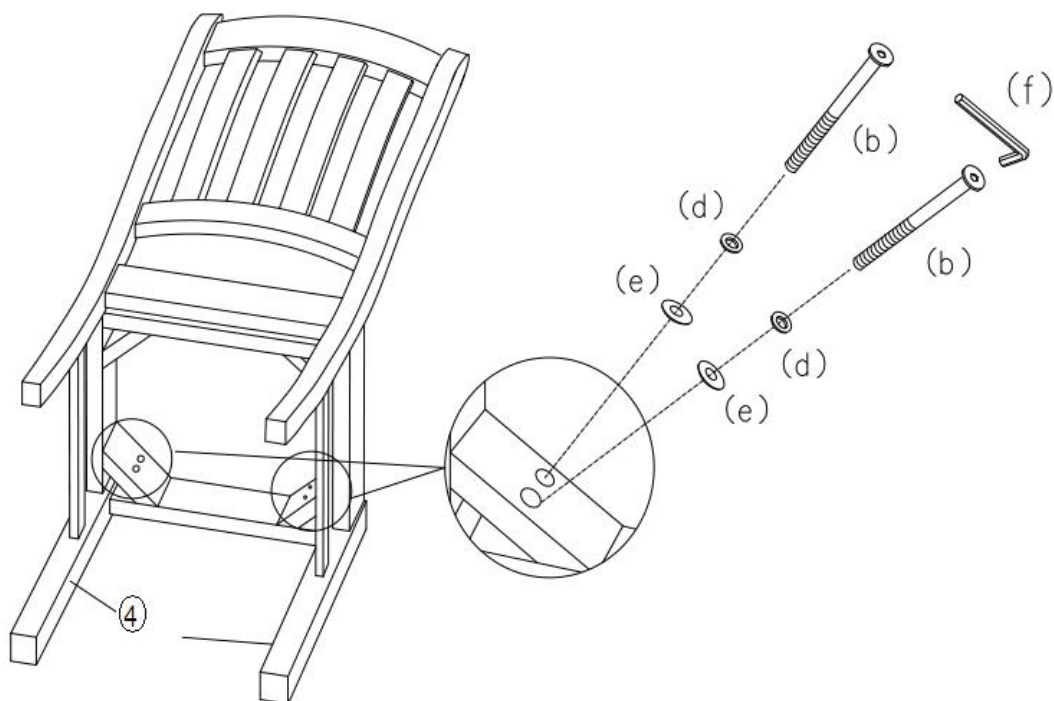 


Fasten legs ④ to corner block with Allen bolt (g), spring washer (d) and steel washer (e).


Step 5

You will need:

  c, 4× Wood screw M4mm×40mm

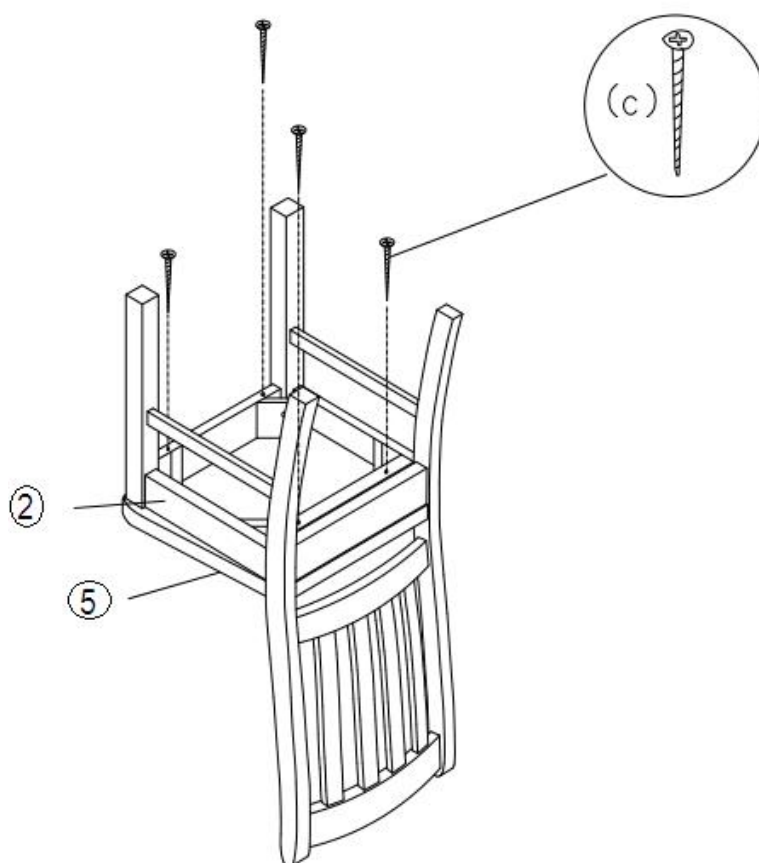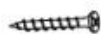

 Fasten the seat ⑤ to the base frame ② with wood screws (c).
Carefully turn the chair over.
Repeat with the remaining chair.

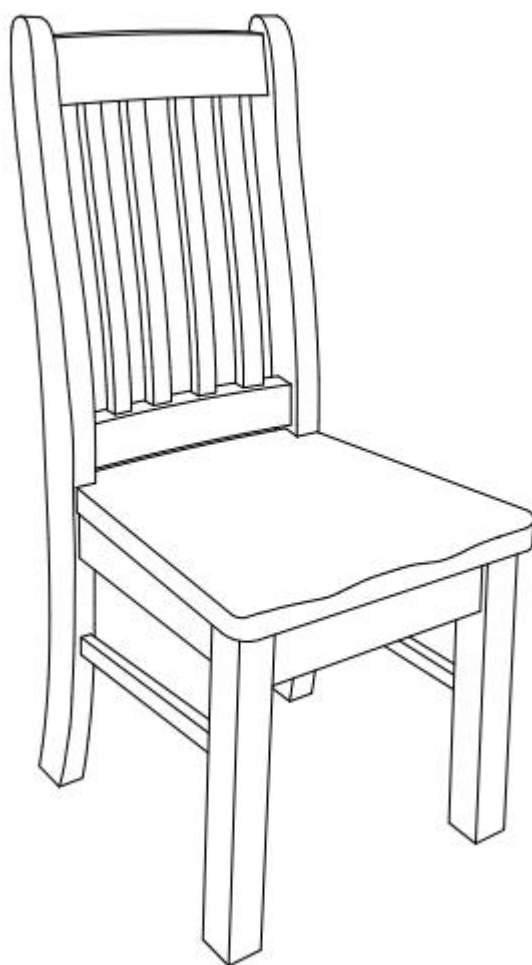

The job is now complete !

In the interest of our environment
Please dispose of all packaging thoughtfully.

Care Instructions

To extend the life span of your furniture, please observe the care instructions below.

Handling & Maintenance

Water and other liquids can cause discoloration and damage to the wooden surface. In case any liquids are spilled on the surface, remove immediately with a clean cloth. Avoid rubbing the spilled liquid into the surface, but wipe gently, using a clean, firmly wrung damp cloth. Dry afterwards using a clean, dry cloth. If stains or marks persist, seek professional help and advice.

Do not use spirits, bleaches or any other chemical cleaners to clean the furniture.

Any spillages should be wiped clean immediately. Once cleared, ensure that the whole surface is wiped clean and dry.

Recommendations

- Wood expands and contracts according to the surrounding humidity and temperature. In case of large temperature and humidity fluctuations, the wood might warp and/or crack. To avoid this, indoor humidity should ideally be kept between 40% and 60%.
- Do not place the furniture near a heat source, in hot surroundings, or in direct sunlight.
- Do not place the furniture near to an air-conditioning unit.
- Always place the furniture on an even or flat surface to prevent unnecessary pressures on connecting joints of the furniture.
- Take care when moving the furniture across the floor. Do not drag the furniture, as this can cause damage to both the furniture and the floor.
- Always use coasters/placements underneath hot objects, such as pans, plates or glassware to protect the surface of the furniture.
- It is advisable to protect the surface of the furniture when writing, drawing, etc, to prevent possible damage.
- Please note that this furniture is designed for indoor household use only, and therefore is not suitable for outdoor or commercial use. The warranty will be voided if furniture is used for commercial or outdoor purposes.